



Guidance for safe use of the pressure washer.

This pressure washer produces a very powerful jet which can puncture skin and cause severe damaged to some materials such as wood and gel coat. To avoid an accident please follow the guidance below.

- DO ensure the nozzle is attached properly before starting the machine.
- DO keep hands and feet clear of the cleaning nozzle at all times.
- DON'T fill the fuel tank whilst the engine is running
- DON'T leave the nozzle in a closed position for more than a minute or two while the equipment is running. The pump may overheat.
- DON'T use the pressure washer inside as the fumes from the motor can cause a build-up of dangerous fumes
- DON'T point the nozzle at people or animals serious injury could occur.
- DON'T let anyone under 16 use the pressure washer.

If the pressure washer is damaged or not working properly please contact a member of the Sailing Committee.

Wivenhoe Sailing Club accepts no responsibility for damage to persons or property caused by the use of the pressure washer.